

VERSION INFO AND FIRMWARE UPDATE

MIX TOOLS > SETTINGS [GEAR] > UTILITIES > VERSION INFO

Version Info displays the current firmware version for the local Livemix Pro Solo or Livemix Pro Duo as well as the Livemix PRO-16/32 it is connected to. If there are Livemix DA-8 units in the system they will show up as well.

NOTE: The USB drive with the update file MUST be in the Livemix PRO-16/32 when updating all units.

UPDATE ALL PRO DUO OR PRO SOLO UNITS

To update all the Livemix Pro Solo and Livemix Pro Duo units currently connected to the Livemix Pro system, press the UPDATE PRO DUO/PRO SOLO button. You will be prompted to enter a USB Flash Drive with the firmware update into the front panel USB port on the connected Livemix PRO-16/32.

1. Download the latest firmware from <http://www.digitalaudio.com/support>.
2. Unzip the firmware zip file and copy the LMUPDATE folder to the root directory of a FAT32 formatted USB flash drive. Please make sure the LMUPDATE folder is not inside another folder and is in the "root" of the USB flash drive.
3. Insert the USB Flash Drive into the front panel USB port on the PRO-16/32.
4. Press the UPDATE PRO DUO / PRO SOLO button.
5. On the confirmation screen, Press YES to begin the update. If you do not want to update, press NO.
6. Confirm that the USB Flash Drive is inserted when prompted.

NOTE: This may take a number of minutes to update all the units. Please do not power off the Livemix system or any connected units while the update is being performed.

INDIVIDUAL PRO SOLO OR PRO DUO UPDATE

To update a single Livemix Pro Solo or Livemix Pro Duo, insert a USB Flash Drive with the firmware into the USB slot on the personal mixer. Remove the cable to turn off the power. PRESS and HOLD the Intercom button (or both Intercom buttons on the Pro Duo) and plug the cable back in. The system will prompt you to update the firmware of the local unit.

UPDATE PRO 16 OR PRO 32 UNITS

To update the Livemix PRO-16 or Livemix PRO-32, press the UPDATE PRO 16/32 button. You will be prompted to enter a USB Flash Drive with the firmware update into the front panel USB port on the connected Livemix PRO-16 or Livemix PRO-32.

1. Download the latest firmware from <http://www.digitalaudio.com/support>.
2. Unzip the firmware zip file and copy the LMUPDATE folder to the root directory of a FAT32 formatted USB flash drive. Please make sure the LMUPDATE folder is not inside another folder and is in the "root" of the USB flash drive.
3. Insert the USB Flash Drive into the front panel USB port on the PRO-16/32.
4. Press the UPDATE PRO-16/32 button.
5. On the confirmation screen, Press YES to begin the update. If you do not want to update, press NO.
6. Confirm that the USB Flash Drive is inserted when prompted.

CHANNEL		USB		⏪ BACK
LIVEMIX VERSION INFO				
View and update firmware versions				
PRO SOLO VERSION	BOOTLOADER 1.01 FIRMWARE 1.06		UPDATE PRO DUO/ PRO SOLO	
PRO 16/32 VERSION	BOOTLOADER 1.01 FIRMWARE 1.06		UPDATE PRO 16/32	
DANTE VERSION	DANTE FW 4.2.8.7 DANTE HW 4.2.7.9	PRODUCT SW 1.0.0.0		UPDATE DANTE
DA-8 #1 VERSION				UPDATE DA-8
DA-8 #2 VERSION				

FIRMWARE UPDATE				⏪ BACK
UPDATE PROGRESS				ABORT UPDATE
PORT 1 A-SOLO UPDATING B-SOLO NO DEVICE	PORT 2 DUO UPDATING	PORT 3 NO DEVICE	PORT 4 NO DEVICE	
PORT 5 NO DEVICE	PORT 6 NO DEVICE	PORT 7 NO DEVICE	PORT 8 NO DEVICE	
PORT 9 NO DEVICE	PORT 10 NO DEVICE	PORT 11 NO DEVICE	PORT 12 NO DEVICE	
PORT 13 NO DEVICE	PORT 14 A-SOLO UPDATING B-SOLO NO DEVICE	PORT 15 NO DEVICE	PORT 16 NO DEVICE	

UPDATE DA-8 UNITS

To update connected Livemix DA-8 units, press the UPDATE DA-8 button. You will be prompted to enter a USB Flash Drive with the firmware update into the front panel USB port on the connected Livemix PRO-16/32. If two DA-8 units are connected, both will be updated.

1. Download the latest firmware from <http://www.digitalaudio.com/support>.
2. Unzip the firmware zip file and copy the LMUPDATE folder to the root directory of a FAT32 formatted USB flash drive. Please make sure the LMUPDATE folder is not inside another folder and is in the "root" of the USB flash drive.
3. Insert the USB Flash Drive into the front panel USB port on the PRO-16/32.
4. Press the UPDATE DA-8 button.
5. On the confirmation screen, Press YES to begin the update. If you do not want to update, press NO.
6. Confirm that the USB Flash Drive is inserted when prompted.

UPDATE DANTE FIRMWARE

To update the Dante Firmware, press the UPDATE button. You will be prompted to enter a USB Flash Drive with the firmware update into the front panel USB port on the connected Livemix PRO-16/32.

1. Download the latest firmware from <http://www.digitalaudio.com/support>.
2. Unzip the firmware zip file and copy the LMUPDATE folder to the root directory of a FAT32 formatted USB flash drive. Please make sure the LMUPDATE folder is not inside another folder and is in the "root" of the USB flash drive.
3. Insert the USB Flash Drive into the front panel USB port on the PRO-16/32.
4. Press the UPDATE DANTE button.
5. On the confirmation screen, Press YES to begin the update. If you do not want to update, press NO.
6. Confirm that the USB Flash Drive is inserted when prompted.

NOTE: To find Dante Network IP information, LONG PRESS on the Dante Firmware or Software cells on the LIVEMIX VERSION INFO screen.

